

# AFT BAGGAGE COMPARTMENT FLOOR PROTECTOR, KIT INSTRUCTIONS FOR CONTINUING AIRWORTHINESS

**MODELS: EUROCOPTER AS350** 

Read all of the Instructions for Continuing Airworthiness thoroughly prior to performing any activities relating to this product

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 1 of 14





# **Table of Contents**

<u>Section</u>	<u>Description</u>	<u>Page</u>
1	Description	2
2	Maintenance Manual Supplement	3
3	Installation & Removal Instructions Installation Instructions	8
	Removal Instructions	11
4	Illustrated Parts Breakdown	12

## **Notes**

- 1. If changes to this document are required, Alpine Aerotech Ltd. shall revise all pages and reissue the entire document.
- 2. Alpine Aerotech Ltd. shall make any subsequent revisions of this document available free of charge upon request. Alpine Aerotech Ltd. also recommends that the end user of this product periodically verify the revision level of this document.

# **Section 1: Description**

## **Description**

The following information provides a functional description of the Aft Baggage Compartment Floor Protector, Kit as defined in Alpine Aerotech Ltd. authority dataset AAL-313-040-001.

- There is a potential for cargo to damage expensive composite panels located in the baggage compartment. This occurs most frequently during loading and unloading operations, but can also occur during small inflight shifts of said cargo.
- This Protection, Kit when installed adds additional protection to the panel, as it is manufactured from a material specifically designed to spread and attenuate energy.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 2 of 14





## Section 2: Maintenance Manual Supplement

## **General Notes**

- 1. The following information defines the instructions for continuing airworthiness, repair allowances and airworthiness limitations for the item(s) referenced within this document.
- 2. Refer to the current revisions of the Eurocopter Maintenance Manual for the AS350 for Instructions for Maintenance/Inspection with respect to the item(s) referenced within this document.
- 3. Refer to the Section 3: Installation & Removal Instructions and Section 4: Illustrated Parts Breakdown for the replacement and/or installation of the item(s) referenced within this section.
- 4. Scheduled inspection for the item(s) referenced within this document shall be accomplished in accordance with (IAW) the Inspection Procedures specified.
- 5. Repair allowances for the item(s) referenced within this document shall be accomplished IAW the Repair Procedures specified.
- 6. Limitations for the item(s) referenced within this document are IAW the Airworthiness Limitations specified.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 3 of 14





# **Airworthiness Limitations**

**Supplement to applicable Maintenance Manual, Chapter 4, Airworthiness Limitations Schedule** 

## **Notes**

- 1. Refer to the applicable Maintenance Manual, Chapters, for general information on airworthiness limitations and airworthiness limitation schedules.
- 2. Item(s) <u>not</u> listed in the Scheduled Airworthiness Limitations section within this document have an unlimited airworthiness life.

## **Scheduled Airworthiness Limitations**

1. There are no airworthiness limitations associated with the item(s) referenced within this document.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 4 of 14





# **Inspection Procedures**

# Supplement to applicable Maintenance Manual, Chapter 5, Inspection and Component Overhaul Schedule

## **Notes**

- 1. Refer to the applicable Master Servicing Manual, Breakdown of the MSM Section 7, for general information on inspections, inspection definitions, inspection intervals, inspection methods and inspection schedules.
- 2. General Inspections, as indicated within this document, are defined as visual, non-thorough checks.
- 3. Detailed Inspections, as indicated within this document, are defined as visual and thorough, searching checks.
- 4. Perform Daily Inspections every day, prior to flight operation. If damage is detected, perform the 150 Hour/12 Month Inspections.
- 5. Perform 150 Hour/12 Month Inspections every 150 hours or every 12 months, whichever occurs first, prior to flight operation. If damage is detected, refer to the Repair Procedures section within this document.

#### Scheduled Inspections

1. Daily Inspections

Data Reference: Section 3: Installation and Removal Instructions

Section 4: Illustrated Parts Breakdown

- i. Perform a General Inspection on the Aft Baggage Compartment Floor Protector, Kit, Installation for general condition.
- ii. Perform a General Inspection on the Aft Baggage Compartment Floor Protector, Kit, Installation for proper security.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 5 of 14





# **Scheduled Inspections**

2. 150 Hour/12 Month Inspections

Data Reference: Section 3: Installation and Removal Instructions

Section 4: Illustrated Parts Breakdown

I. Perform a Detailed Inspection on all items to ensure proper security.

II. Perform a Detailed Inspection on all items/materials to ensure proper integrity.

III. Perform a Detailed Inspection on the Aft Baggage Compartment Floor Protector, Kit to ensure that it is not delaminating.

IV. Perform a Detailed Inspection on all surfaces & locations with Velcro applied to ensure no damage has occurred to the honeycomb panel.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 6 of 14





# **Repair Procedures**

1. Repairs to the item(s) referenced within this document are **not** permitted. Contact Alpine Aerotech Ltd. for further information if repairs are required to the item(s) referenced within this document.

Revision: NI Date: 2013-05-0

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 7 of 14





# Section 3: Installation & Removal Instructions

## Weight & Balance

 Part Number
 Description
 Weight
 Long. Arm
 Lat. Arm

 AAL-313-040-001
 Aft Baggage Compartment
 2.78\*
 179.727
 0.000

 Floor Protector, Kit
 1.261 (Kg) 4.565 (m)
 .000 (m)

## **General Notes**

- 1. All Installation Instructions shall be accomplished IAW standard aircraft practices. Refer to the current revision of the FAA publications AC 43.13-1B and AC 43.13-2B for details on standard aircraft practices.
- 2. All Dimensions are in imperial measures (inches/pounds).
- 3. Refer to Section 2: Maintenance Manual Supplement for instructions on maintenance for the item(s) referenced within this section.
- 4. Refer to the Section 4: Illustrated Parts Breakdown for the part numbers of the item(s) referenced within this section.

## **Installation Notes**

Typical item number for all like items in this view unless otherwise specified.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 8 of 14

<sup>\*</sup> Total increase in weight to aircraft.





# **Installation Instructions**

- 1. Gain access to the baggage compartment.
- 2. Pre-fit the Panel, Assy (Item 1) by lining up the forward edge of the panel, assy with the existing forward edge of the baggage compartment, and center visually. Reference Figure 1.
- 3. With the panel lined up use the pre-cut RBL & LBL inboard .25 holes and a felt pen to mark out the locations for the Velcro, Details (Items 5) and remove the panel (Item 1). Reference Figure 1.

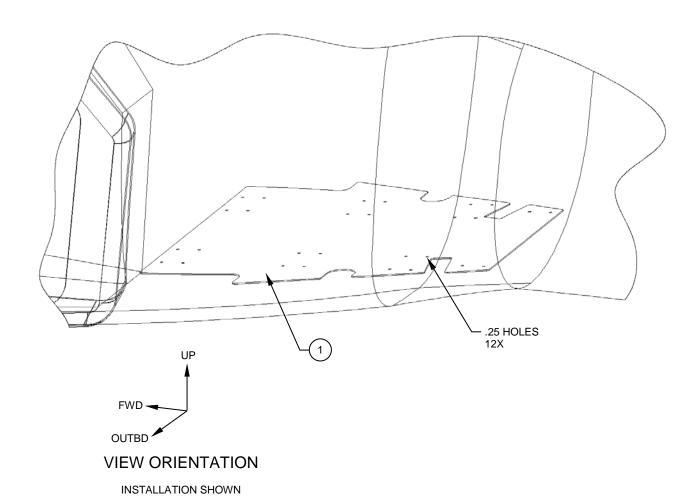


Figure 1
Some Items
Removed for
Clarity

Revision: NI


Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 9 of 14





## **Installation Instructions**

- 4. Clean the areas between the felt pen marks with alcohol taking care not to wipe away the felt pen marks.
- 5. Individually separate each Velcro, Detail (Items 5) off of the Floor Panel, Assy (Item 1) and peel adhesive backing from the Velcro, Details (Items 5).
- 6. Using the felt pen marks as reference points, apply the Velcro, Details (Items 5) to the panel in their respective locations. Reference Figure 3. Apply adequate pressure to ensure a secure bond.

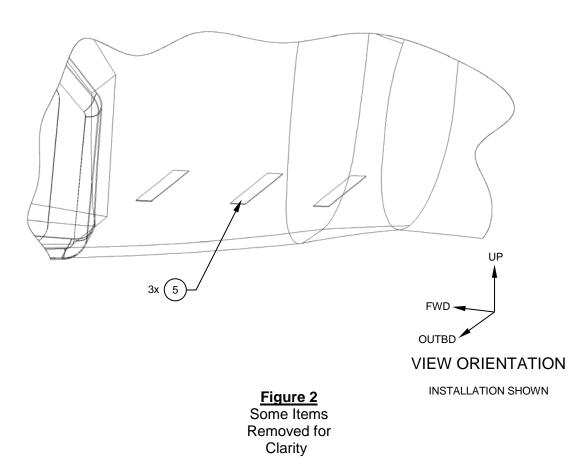

- 7. Re-install the Panel, Assy (Item 1) onto Velcro strips.
- 8. Installation complete.
- 9. Perform a General Inspection of all items to ensure proper installation.
- 10. Update the aircraft logbook for the installation of the Aft Baggage Compartment Floor Protector, Kit.

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 10 of 14





# **Removal Instructions**

- For the removal the Aft Baggage Compartment Floor Protector, Kit for either inspections, or mission configuration, the removal of the Baggage Compartment, Protector, Kit can be considered the opposite of installation for step 7. For permanent removal, of Aft Baggage Compartment Floor Protector, Kit perform step 7 opposite of installation and remove all bonded Velcro, Details.
- 2. Perform a General Inspection of all items to ensure proper removal.
- 3. Update the aircraft logbook for the removal of the Aft Baggage Compartment Floor Protector, Kit.


Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 11 of 14





# **Section 4: Illustrated Parts Breakdown**

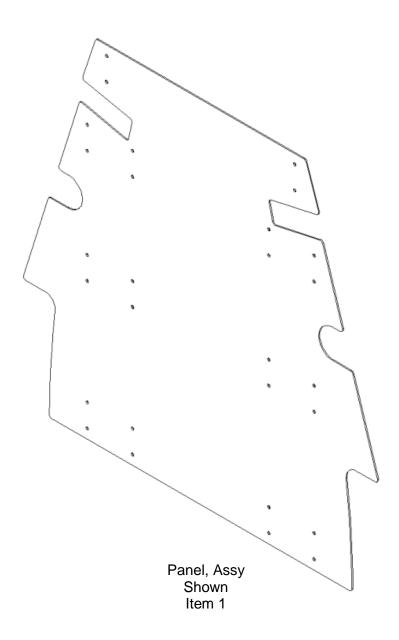


Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 12 of 14





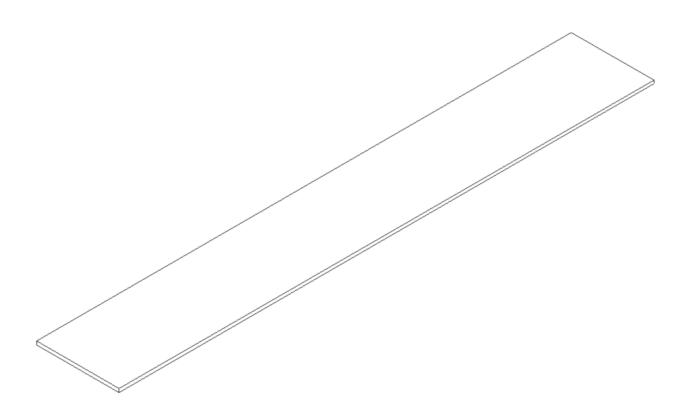

Velcro, Detail Shown Item 5

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 13 of 14





					REF				
ITEM	QTY	NUM BER	DESCRIPTION	MATERIAL	STOCK SIZE	SPEC	FINISH	MANUFACTURER	NCAGEC
-	-	AAL-313-040-001	AFT BAGGAGE COMPARTMENT	C/O SHA DED ITEMS					
			FLOOR PROTECTOR, KIT	ONLY					
1	1	AAL-313-041-001	PANEL, ASSY	NA	NA	NA	NA	ALPINE A EROTECH LTD.	L0171
2	1	AAL-313-042-001	PANEL, DETAIL	NA	0.1	SEE MFR	SEE MFR	ALPINE A EROTECH LTD.	L0171
3	3	151394	IVELCRO, DETAIL	LOOP 1000,	2 X 21.75 SEE MF	SEE MED	SEE MFR	VELCRO USA INC.	11153
3	3			BLACK, 8224 PSA		JOLE IVII K	SLL IVIFK		
4	4	151394	IVELCRO, DETAIL	LOOP 1000,	2 X 18.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
4	'	151394		BLACK, 8224 PSA					
_	٦	151405	IVELCRO, DETAIL	HOOK 88, BLACK	2 x 13.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
5	3			8224 PSA					

Revision: NI

Date: 2013-05-07 Doc. No.: AAL-313-045-701 Page 14 of 14