

FIREWALL COVER INSTALLATION INSTRUCTIONS

MODELS: BELL 212 & 412

Read all of the installation instructions thoroughly prior to the installation of this product

Revision: NI

Date: 2005-09-30 Doc. No.: AAL-237-015-001 Page 1 of 5





Weight & Balance

<u>Part Number</u>	<u>Description</u>	<u>Weight</u>	<u>Long. Arm</u>	<u>Lat. Arm</u>
AAL-237-011-001	Cover, Assy	0.43*	162.14	0.00
	•	0.20 (Ka)	4.12 (m)	0.00 (m)

^{*} Total increase in weight to aircraft.

General Notes

- 1. All Installation Instructions shall be accomplished in accordance with (IAW) standard aircraft practices. Refer to the current revision of the FAA manuals AC 43.13-1B and AC 43.13-2A for details on standard aircraft practices.
- 2. All Fasteners shall be torqued to standard aircraft specifications. Refer to the current revision of the FAA manuals AC 43.13-1B and AC 43.13-2A for details on standard torque specifications.
- 3. All Dimensions are in imperial measures (inches/pounds).
- 4. Refer to the current revision of the Firewall Cover Illustrated Parts Breakdown (AAL-237-015-201) for the part numbers of the item(s) referenced within this document.
- 5. Refer to the current revision of the Firewall Cover Maintenance Manual Supplement (AAL-237-015-101) for instructions on continuing airworthiness for the item(s) referenced within this document.
- 6. If changes to this document are required, Alpine Aerotech Ltd. shall revise all pages and reissue the entire document.
- 7. Alpine Aerotech Ltd. shall make any subsequent revisions of this document available upon request.

Installation Notes

1	Hole omitted in Cover, Assy (Item 1), do not backdrill.			
1	Remove and discard existing aircraft item. I alternate.	Existing aircraft item shall not be used as an		
2	Reuse existing aircraft item.			

Revision: NI


Date: 2005-09-30 Doc. No.: AAL-237-015-001 Page 2 of 5





Installation Instructions

- 1. Gain access to the existing Cover.
- 2. Temporarily remove the existing hardware common to the existing Cover. Reference Figures 1 & 2 and Step 5.

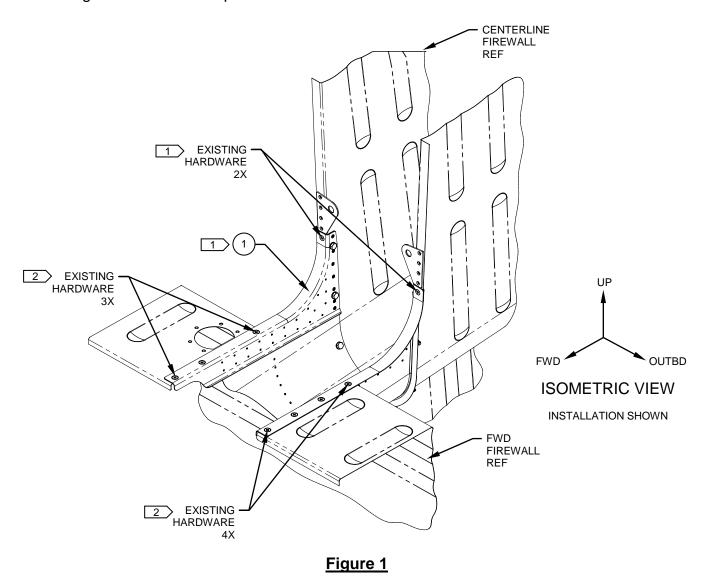

3. Remove and discard the existing Cover. Reference Figure 1 and Pennant Note 1.

Revision: NI

Date: 2005-09-30 Doc. No.: AAL-237-015-001 Page 3 of 5





Installation Instructions

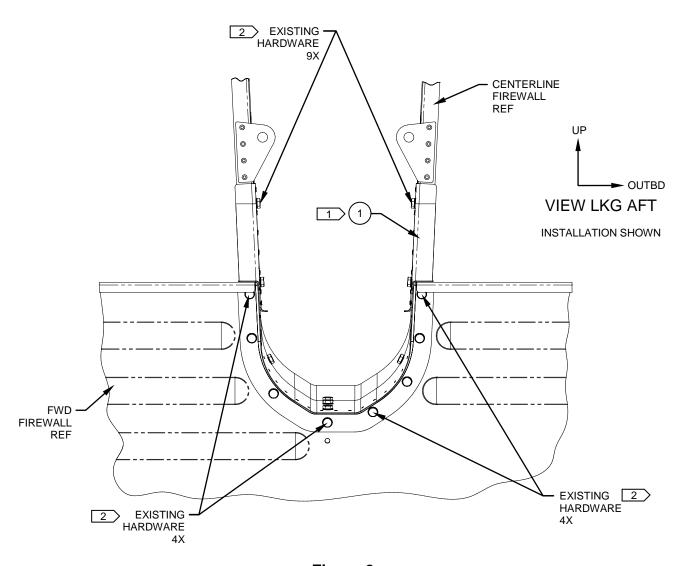


Figure 2

4. Prepare the Forward/Centerline Firewalls by removing any residual gasket material, dirt, etc. and wipe the mating surfaces clean. Reference Figure 1.

Revision: NI

Date: 2005-09-30 Doc. No.: AAL-237-015-001 Page 4 of 5





Installation Instructions

5. Install the Cover, Assy (Item 1) using the existing hardware except as shown. Reference Figures 2 & 3 and Flag Note 1.

NOTE: Do not backdrill Cover, Assy (Item 1).

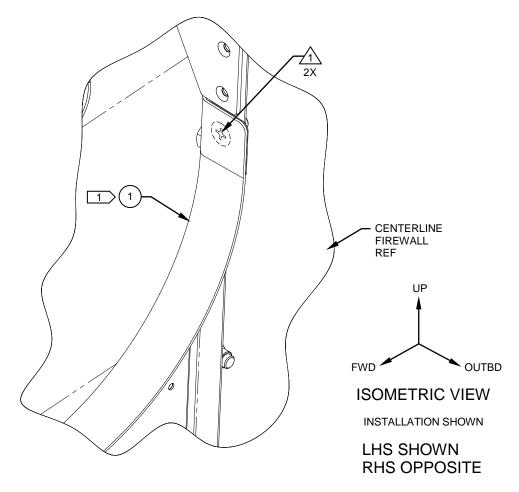


Figure 3

- 6. Installation complete.
- 7. Perform a General Inspection of all items to ensure proper installation.
- 8. Update the aircraft logbook for the installation of the Cover, Assy (Item 1).

Revision: NI

Date: 2005-09-30 Doc. No.: AAL-237-015-001 Page 5 of 5