

LHS RHS SLIDING DOOR FLOOR PROTECTION, KIT INSTRUCTIONS FOR CONTINUING AIRWORTHINESS

MODELS: EUROCOPTER AS350*

*With AFT LHS RHS sliding doors installed

Read all of the Instructions for Continuing Airworthiness thoroughly prior to performing any activities relating to this product

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 1 of 23





Table of Contents

<u>Section</u>	<u>Description</u>	<u>Page</u>
1	Description	2
2	Maintenance Manual Supplement	3
3	Installation & Removal Instructions	8
	Installation Instructions	9
	Removal Instructions	16
4	Illustrated Parts Breakdown	17

Notes

- 1. If changes to this document are required, Alpine Aerotech LP shall revise all pages and reissue the entire document.
- 2. Alpine Aerotech LP shall make any subsequent revisions of this document available free of charge upon request. Alpine Aerotech LP also recommends that the end user of this product periodically verify the revision level of this document.

Section 1: Description

Description

The following information provides a functional description of the LHS RHS Sliding Door Floor Protection, Kit as defined in Alpine Aerotech LP authority dataset AAL-312-020-002.

- The Floor Protection, Kits are rigid pieces of material that are installed atop the existing floor to
 protect it from dents and punctures associated with typical aircraft usage. This occurs most
 frequently during loading and unloading operations, but can also occur during small inflight shifts
 of said cargo.
- The LHS RHS Sliding Door Floor Protection, Kit when installed, adds additional protection to the floor panels, as it is manufactured from a material specifically designed to spread and attenuate energy.

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 2 of 23





Section 2: Maintenance Manual Supplement

General Notes

- 1. The following information defines the instructions for continuing airworthiness, repair allowances and airworthiness limitations for the item(s) referenced within this document.
- 2. Refer to the current revisions of the Eurocopter AS350 Master Service Manual for Instructions for Maintenance/Inspection with respect to the item(s) referenced within this document.
- 3. Refer to the Section 3: Installation & Removal Instructions and Section 4: Illustrated Parts Breakdown for the replacement and/or installation of the item(s) referenced within this section.
- 4. Scheduled inspection for the item(s) referenced within this document shall be accomplished in accordance with (IAW) the Inspection Procedures specified.
- 5. Repair allowances for the item(s) referenced within this document shall be accomplished IAW the Repair Procedures specified.
- 6. Limitations for the item(s) referenced within this document are IAW the Airworthiness Limitations specified.

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 3 of 23





Airworthiness Limitations

The Airworthiness Limitations section is approved by the Minister and specifies maintenance required by any applicable airworthiness or operating rule unless an alternative program has been approved by the Minister.

The Airworthiness Limitations section is FAA approved and specifies maintenance required under Sections 43.16 and 91.403 of the Federal Aviation Regulations unless an alternative program has been FAA approved.

Supplement to applicable Maintenance Manual, Chapter 4, Airworthiness Limitations Schedule

Notes

- 1. Refer to the applicable Master Service Manual, Chapters for general information on airworthiness limitations and airworthiness limitation schedules.
- 2. Item(s) <u>not</u> listed in the Scheduled Airworthiness Limitations section within this document have an unlimited airworthiness life.

Scheduled Airworthiness Limitations

1. There are no airworthiness limitations associated with the item(s) referenced within this document.

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 4 of 23





Inspection Procedures

Supplement to applicable Maintenance Manual, Chapter 5, Inspection and Component Overhaul Schedule

Notes

- 1. Refer to the applicable Master Service Manual, Breakdown of the MSM Section 7, for general information on inspections, inspection definitions, inspection intervals, inspection methods and inspection schedules.
- 2. General Inspections, as indicated within this document, are defined as visual, non-thorough checks.
- 3. Detailed Inspections, as indicated within this document, are defined as visual and thorough, searching checks.
- 4. Perform Daily Inspections every day, prior to flight operation. If damage is detected, perform the 150 Hour/12 Month Inspections.
- 5. Perform 150 Hour/12 Month Inspections every 150 hours or every 12 months, whichever occurs first, prior to flight operation. If damage is detected, refer to the Repair Procedures section within this document.

Scheduled Inspections

1. Daily Inspections

Data Reference: Section 3: Installation and Removal Instructions

Section 4: Illustrated Parts Breakdown

- i. Perform a General Inspection on the LHS RHS Sliding Door Floor Protection, Kit, Installation for general condition.
- ii. Perform a General Inspection on the LHS RHS Sliding Door Floor Protection, Kit, Installation for proper security.

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 5 of 23





Scheduled Inspections

2. 150 Hour/12 Month Inspections

Data Reference: Section 3: Installation and Removal Instructions

Section 4: Illustrated Parts Breakdown

I. Perform a Detailed Inspection on all items to ensure proper security.

II. Perform a Detailed Inspection on all items/materials to ensure proper integrity.

III. Perform a Detailed Inspection on the LHS RHS Sliding Door Floor Protection, Kit to ensure that it is not delaminating.

IV. Perform a Detailed Inspection on all surfaces & locations with Velcro applied to ensure no damage has occurred to the aircraft floor.

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 6 of 23





Repair Procedures

1. Repairs to the item(s) referenced within this document are <u>not</u> permitted. Contact Alpine Aerotech LP for further information if repairs are required to the item(s) referenced within this document.

Revision: C Date: 2024-08-06

Doc. No.: AAL-312-035-702 Page 7 of 23





Section 3: Installation & Removal Instructions

Weight & Balance

 Part Number
 Description
 Weight
 Long. Arm
 Lat. Arm

 AAL-312-020-002
 LHS RHS Sliding Door Floor
 13.73*
 68.182
 .103 RBL

 Protection, Kit
 6.227 (Kg) 1.732 (m)
 .0026 (m)

General Notes

- 1. All Installation Instructions shall be accomplished IAW standard aircraft practices. Refer to the current revision of the FAA publications AC 43.13-1B and AC 43.13-2B for details on standard aircraft practices.
- 2. All Dimensions are in imperial measures (inches/pounds).
- 3. Refer to Section 2: Maintenance Manual Supplement for instructions on maintenance for the item(s) referenced within this section.
- 4. Refer to the Section 4: Illustrated Parts Breakdown for the part numbers of the item(s) referenced within this section.

Alternate Part: DIN965-M4 x 16

Alternate Part: DIN7985-M4 x 18

Revision: C
Date: 2024-08-06
Doc. No.: AAL-312-035-702
Page 8 of 23


^{*} Total increase in weight to aircraft.





Installation Instructions

1. Gain access to the cabin floor, temporarily remove all seats, LHS collective, & foot pedals. Remove any existing floor protection kits, door sills, sliding door transition sill and all related fasteners. Reference Figure 1.

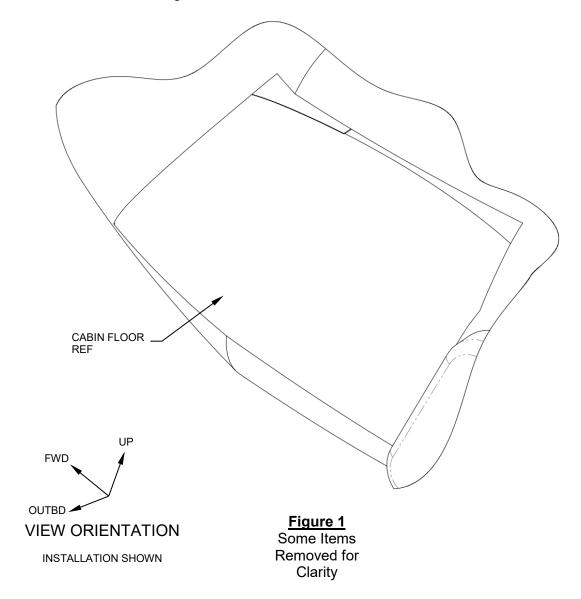

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 9 of 23






Installation Instructions

2. Pre-fit the FWD LHS Sliding Door Floor Protection, Assy (Item 1), FWD RHS Sliding Door Floor Protection, Assy (Item 13), & AFT LHS RHS Sliding Door Floor Protection, Assy (Item 23) by lining up the outboard edge of the panel, assy with the existing floor panel edge. Reference Figure 2.

Note: Ensure clearance around cutout features, cyclic, collective, & pedals etc.

3. With the panel lined up use the pre-cut Ø.25 holes and a felt pen to mark out the locations for the Velcro, Details (Items 9, 10, 11, 12, 20, 21, 22, 29, & 30) and remove the panels (Items 1, 13, &

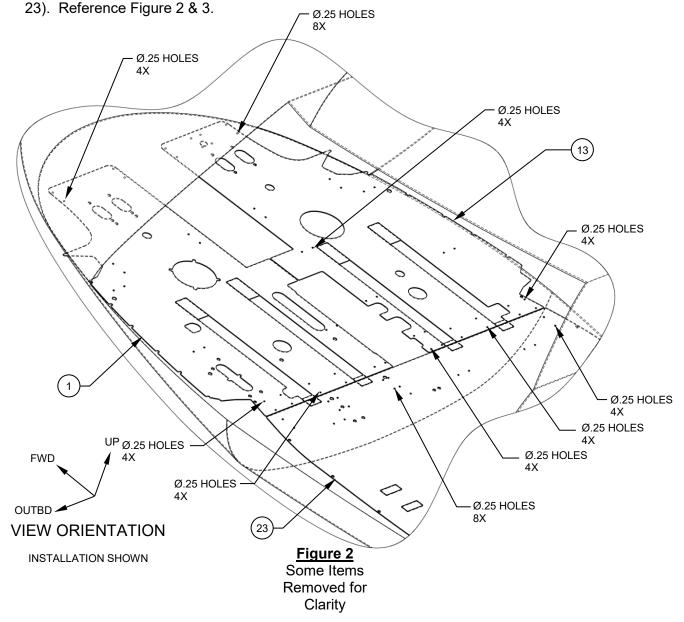

Revision: C


Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 10 of 23





Installation Instructions

- 4. Clean the areas between the felt pen marks with alcohol taking care not to wipe away the felt pen marks.
- 5. Individually separate each Velcro, Detail (Items 9, 10, 11, & 12) off of the FWD LHS Sliding Door Floor Protection, Assy (Item 1), Velcro, Detail (Items 20, 21, & 22) off of the FWD RHS Sliding Door Floor Protection, Assy (Item 13), & Velcro, Detail (Items 29 & 30) off the AFT LHS RHS Sliding Door Floor Protection, Assy (Item 23), peel adhesive backing from the Velcro, Details (Items 9, 10, 11, 12, 20, 21, 22, 29, & 30).
- 6. Using the felt pen marks as reference points, apply the Velcro, Details (Items 9, 10, 11, 12, 20, 21, 22, 29, & 30) to the floor board panel in their respective locations. Reference Figure 3. Apply adequate pressure to ensure a secure bond.

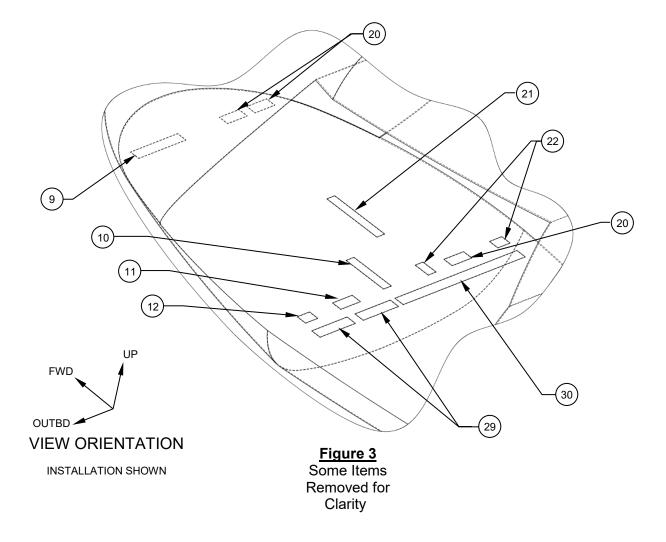

Revision: C


Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 11 of 23





Installation Instructions

- 7. Re-install the FWD LHS Sliding Door Floor Protection, Assy (Item 1), FWD RHS Sliding Door Floor Protection, Assy (Item 13), & AFT LHS RHS Sliding Door Floor Protection, Assy (Item 23) onto Velcro strips. Reference Figures 2 & 3.
- 8. If required, use a sharp utility knife to remove the knock-out rectangles for FWD seats to fit your pilot and co-pilot seat configuration. Be careful not to score the aircraft floor panel with the knife. Reference Figure 4.
- 9. If required, use a sharp utility knife to remove **EITHER** the FWD or AFT set of knock out rectangles to allow the Aft seats to be properly fastened. Be careful not to score the aircraft floor panel with the knife. Reference Figure 4.

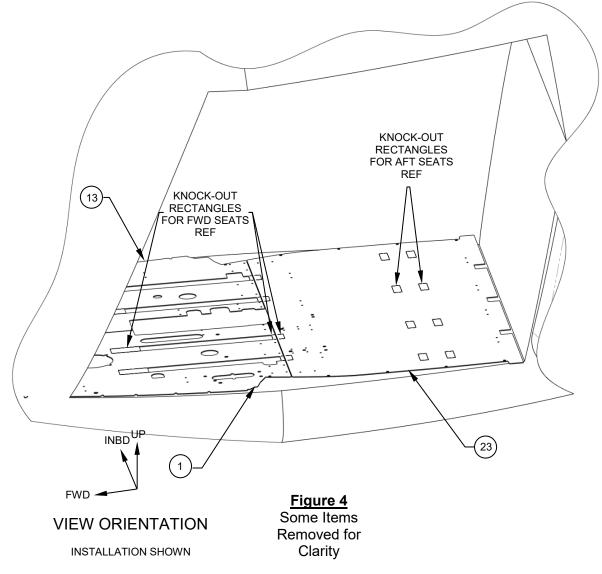

Revision: C


Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 12 of 23





Installation Instructions

10. Install Door Sill, Details (Items 31 & 32) as shown, with provided hardware, Screw, Machine (Item 33). Reference Figure 5.

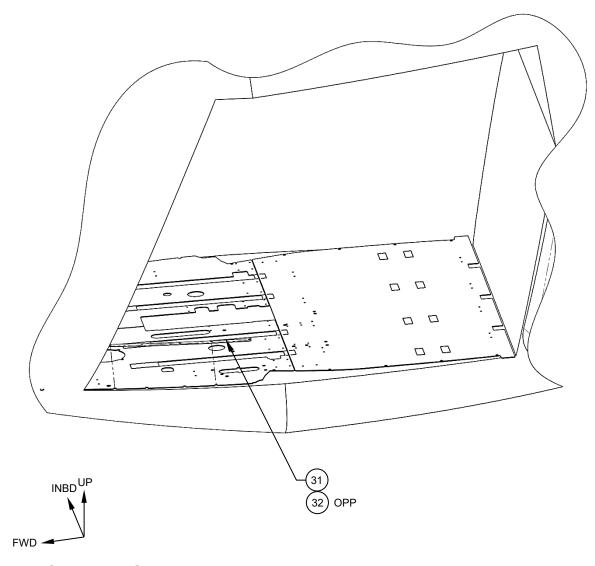

VIEW ORIENTATION

INSTALLATION SHOWN

Figure 5
LHS Shown RHS Opposite
Some Items
Removed for
Clarity

Revision: C


Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 13 of 23





Installation Instructions

11. Re-install the sliding door transition sill over top of the AFT LHS RHS Sliding Door Floor Protection, Assy (Item 23) & FWD LHS Sliding Door Floor Protection, Assy (Item 1) and fasten with provided hardware, Pan Head Phillips Machine, Screw (Item 35) & Washer, Flat (Item 34). Reference Figure 6.

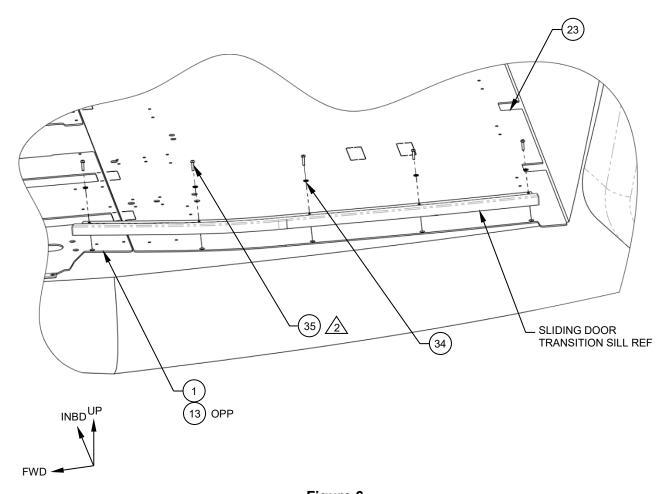

VIEW ORIENTATION

INSTALLATION SHOWN

Figure 6
LHS Shown RHS Opposite
Some Items
Removed for
Clarity

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 14 of 23





Installation Instructions

12. Suggested Grip Tape (Item 36), installation shown.

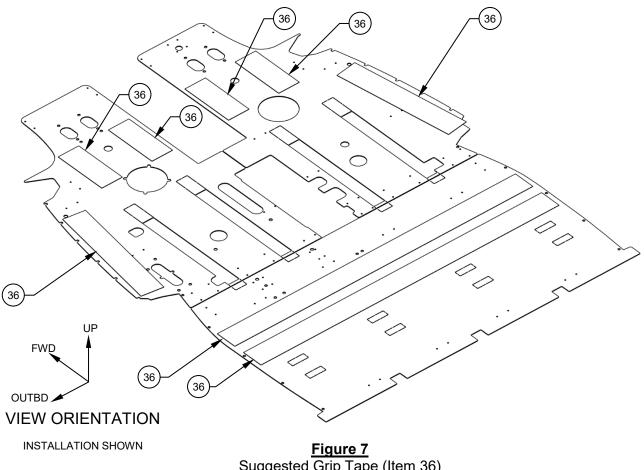


Figure 7
Suggested Grip Tape (Item 36)
Installation Shown
Some Items
Removed for
Clarity

- 13. Installation complete
- 14. Perform a General Inspection of all items to ensure proper installation.
- 15. Update the aircraft logbook for the installation of LHS RHS Sliding Door Floor Protection, Kit.

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 15 of 23





Removal Instructions

- 1. For the removal the LHS RHS Sliding Door Floor Protection, Kit for either inspections, or mission configuration, the removal of the LHS RHS Sliding Door Floor Protection, Kit can be considered the opposite of installation for step 7, 8 & 9. For permanent removal, of LHS RHS Sliding Door Floor Protection, Kit remove all bonded Velcro, Details.
- 2. Perform a General Inspection of all items to ensure proper removal.
- 3. Update the aircraft logbook for the removal of the LHS RHS Sliding Door Floor Protection, Kit.


Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 16 of 23





Section 4: Illustrated Parts Breakdown

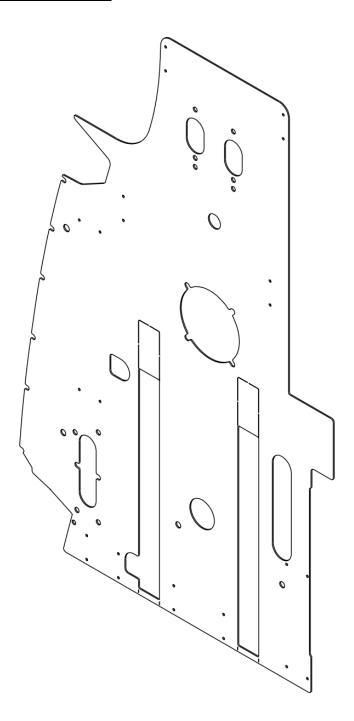


FWD LHS Sliding Door Floor Protection, Assy Shown Item 1

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 17 of 23





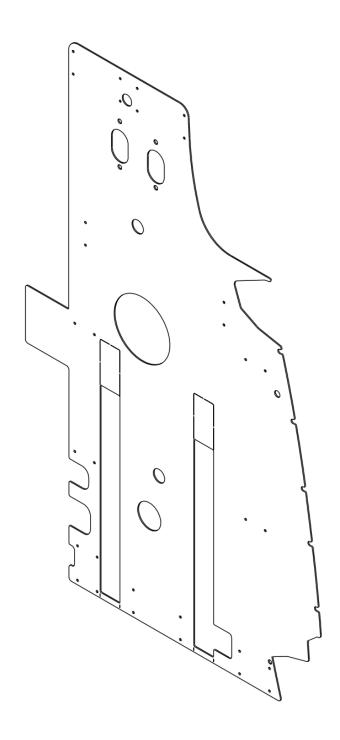


FWD RHS Sliding Door Floor Protection, Assy Shown Item 13

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 18 of 23





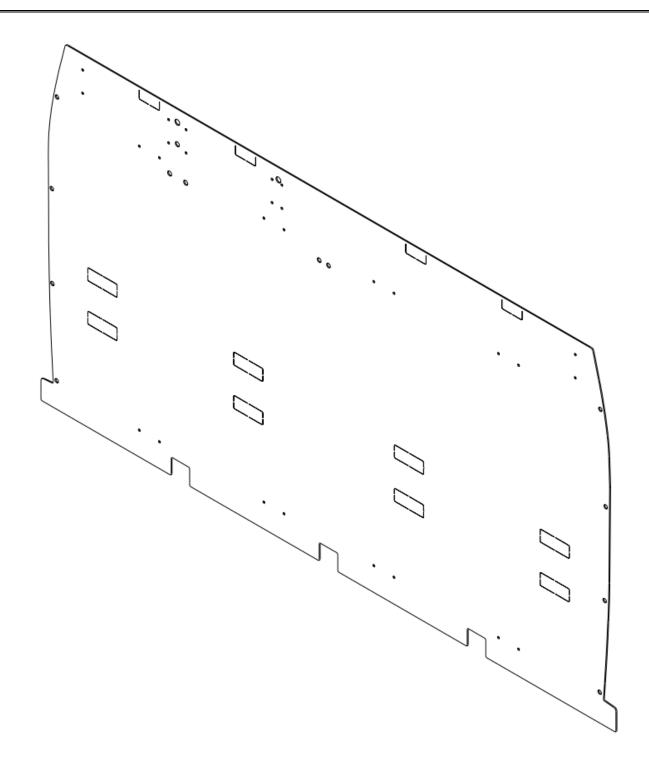

AFT LHS RHS Sliding Door Floor Protection, Assy Shown Item 23

Revision: C


Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 19 of 23



Door Sill, Detail

Shown

Item 32

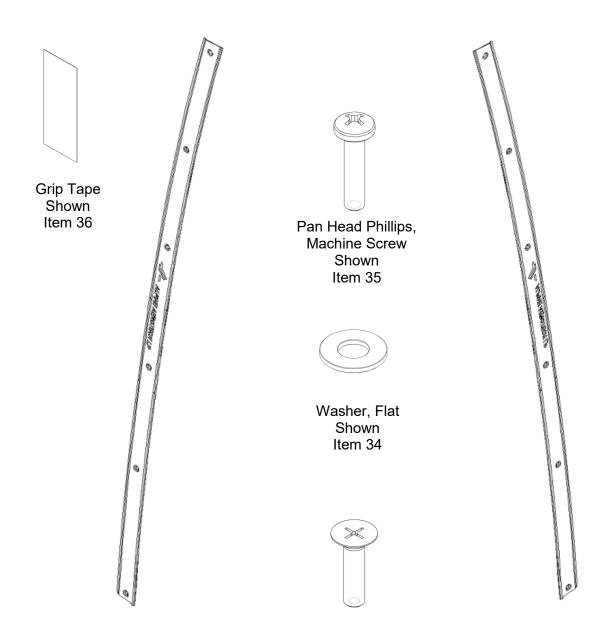

Revision: C

Door Sill, Detail

Shown

Item 31

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 20 of 23

Screw Machine

Shown

Item 33





1260 Industrial Road, Kelowna, B.C., Canada V1Z 1G5 Phone: (250) 769-6344 Fax: (250) 769-6303

www.alpineaerotech.com

Prone: (250) 769-6344 Fax: (250) 769-6303

admin@alpineaerotech.com

ITEM	QTY	NUMBER	DESCRIPTION	MATERIAL	REF STOCK SIZE	SPEC	FINISH	MANUFACTURER	NCAGEC
-	-1	AAL-312-020-002	LHS RHS SLIDING DOOR FLOOR PROTECTION, KIT	C/O SHADED ITEMS ONLY					
1	1	AAL-312-021-013	FWD LHS SLIDING DOOR FLOOR PROTECTION, ASSY	NA	NA	NA	NA	ALPINE AEROTECH LP	L0171
2	1	AAL-312-021-004	FWD LHS SLIDING DOOR FLOOR PROTECTION, ASSY	NA	NA	NA	NA	ALPINE AEROTECH LP	L0171
3	1	AAL-312-022-004	FWD LHS SLIDING DOOR FLOOR PROTECTION, DETAIL	P2C W/TUFFCOAT B/SIDES	0.1	SEE MFR	SEE MFR	ALPINE AEROTECH LP	L0171
4	1	151394	VELCRO, DETAIL	LOOP 1000, BLACK, 8224 PSA	2 X 12.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
5	1	151394	VELCRO, DETAIL	LOOP 1000, BLACK, 8224 PSA	2 X 9.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
6	2	151394	VELCRO, DETAIL	LOOP 1000, BLACK, 8224 PSA	2 X 15.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
7	1	151394	VELCRO, DETAIL	LOOP 1000, BLACK, 8224 PSA	2 x 5.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
8	1	151394	VELCRO, DETAIL	LOOP 1000, BLACK, 8224 PSA	2 X 3.125	SEE MFR	SEE MFR	VELCRO USA INC.	11153
9	1	151405	VELCRO, DETAIL	HOOK 88, BLACK 8289 PSA	2 x 12.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
10	1	151405	VELCRO, DETAIL	HOOK 88, BLACK 8224 PSA	2 X 9.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
11	1	151405	VELCRO, DETAIL	HOOK 88, BLACK 8289 PSA	2 x 5.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153
12	1	151405	VELCRO, DETAIL	HOOK 88, BLACK 8289 PSA	2 X 3.125	SEE MFR	SEE MFR	VELCRO USA INC.	11153
13	1	AAL-312-021-014	FWD RHS SLIDING DOOR FLOOR PROTECTION, ASSY	NA	NA	NA	NA	ALPINE AEROTECH LP	L0171
14	1	AAL-312-021-005	FWD RHS SLIDING DOOR FLOOR PROTECTION, ASSY	NA	NA	NA	NA	ALPINE AEROTECH LP	L0171
15	1	AAL-312-022-005	FWD RHS SLIDING DOOR FLOOR PROTECTION, DETAIL	P2C W/TUFFCOAT B/SIDES	0.1	SEE MFR	SEE MFR	ALPINE AEROTECH LP	L0171
16	3	151394	VELCRO, DETAIL	LOOP 1000, BLACK, 8224 PSA	2 x 5.00	SEE MFR	SEE MFR	VELCRO USA INC.	11153

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 21 of 23





NA

1260 Industrial Road, Kelowna, B.C., Canada V1Z 1G5 Phone: (250) 769-6344 Fax: (250) 769-6303 admin@alpineaerotech.com

ITE QTY NCAGEC NUMBER DESCRIPTION MATERIAL **REF STOCK SIZE** SPEC FINISH **MANUFACTURER** M LOOP 1000, 17 1 151394 VELCRO. DETAIL 2 X 12.00 SEE MFR SEE MFR VELCRO USA INC. 11153 BLACK, 8224 PSA LOOP 1000. 18 2 151394 VELCRO. DETAIL 2 X 15 00 SEE MFR SFF MFR VELCRO USA INC 11153 BLACK, 8224 PSA LOOP 1000, 19 2 151394 VELCRO, DETAIL 2 X 3.125 SEE MFR SEE MFR VELCRO USA INC. 11153 BLACK, 8224 PSA HOOK 88. BLACK 20 3 151405 VELCRO. DETAIL 2×5.00 SEE MFR SFF MFR VELCRO USA INC. 11153 8289 PSA HOOK 88, BLACK 21 151405 VELCRO, DETAIL 2 x 12.00 SEE MFR SEE MFR VELCRO USA INC. 11153 8289 PSA HOOK 88, BLACK 2 VELCRO, DETAIL 2 X 3.125 SEE MFR SEE MFR VELCRO USA INC. 22 151405 11153 8289 PSA AFT LHS RHS SLIDING DOOR AAL-312-021-018 NA NA NA NA ALPINE AEROTECH LP L0171 23 1 FLOOR PROTECTION, ASSY AFT LHS RHS SLIDING DOOR 1 AAL-312-021-006 NA NA NA NA ALPINE AEROTECH LP L0171 24 FLOOR PROTECTION, ASSY P2C AFT LHS RHS SLIDING DOOR 25 AAI -312-022-006 W/TUFFCOAT 0.1 SEE MFR SFF MFR ALPINE AFROTECH LP I 0171 1 FLOOR PROTECTION, DETAIL B/SIDES LOOP 1000, VELCRO, DETAIL SEE MFR SEE MFR 26 4 151394 2 X 26.00 VELCRO USA INC. 11153 BLACK, 8224 PSA LOOP 1000. 27 1 151394 VELCRO, DETAIL 2 X 31.066 SEE MFR SEE MFR VELCRO USA INC. 11153 BLACK, 8224 PSA LOOP 1000. SEE MFR 28 2 151394 VELCRO, DETAIL 2 X 9.00 SEE MFR VELCRO USA INC. 11153 BLACK, 8224 PSA HOOK 88. BLACK 29 2 151405 VELCRO, DETAIL 2 X 9.00 SEE MFR SEE MFR VELCRO USA INC. 11153 8224 PSA HOOK 88. BLACK VELCRO. DETAIL 2 X 31.066 SEE MFR SEE MFR 11153 30 1 151405 VELCRO USA INC. 8289 PSA AAL-312-022-013 DOOR SILL, DETAIL 301 1/4 HARD 0.025 AMS 5517 SEE SPEC ALPINE AEROTECH LP L0171 31 SEE SPEC ALPINE AFROTECH LP 32 1 AAI -312-022-014 DOOR SILL. DETAIL 301 14 HARD 0.025 AMS 5517 I 0171 ISO 7046-SOURCE AS

Revision: C

33

11

ISO 7046-1-M4 x 16

SCREW. MACHINE

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 22 of 23

SEE SPEC

SEE SPEC

REQUIRED

SEE SPEC





	ITEM	QTY	NUMBER	DESCRIPTION	MATERIAL	REF STOCK SIZE	SPEC	FINISH	MANUFACTURER	NCAGEC
	34	10	NAS1149CN832R	WASHER, FLAT	SEE SPEC	SEE SPEC	NAS1149	SEE SPEC	SOURCE AS REQUIRED	NA
2\	35	10	ISO 7045-M4 x 18	PAN HEAD PHILLIPS, MACHINE SCREW	SEE SPEC	SEE SPEC	ISO 7045	SEE SPEC	SOURCE AS REQUIRED	NA
	36	1	3M SAFETY-WALK SLIP-RESISTANT GENERAL PURPOSE TAPES AND TREADS 620, CLEAR 4in - 70070975621 - 200"	SAFETY-WALK GENERAL PURPOSE GRIP TAPE	POLY-URETHANE	200.00"	NA	NFSI SCOF < 0.60	3M	NA

Revision: C

Date: 2024-08-06 Doc. No.: AAL-312-035-702 Page 23 of 23